




Modelo 137

LLAVE IMPACTO PISTOLA 3/8"

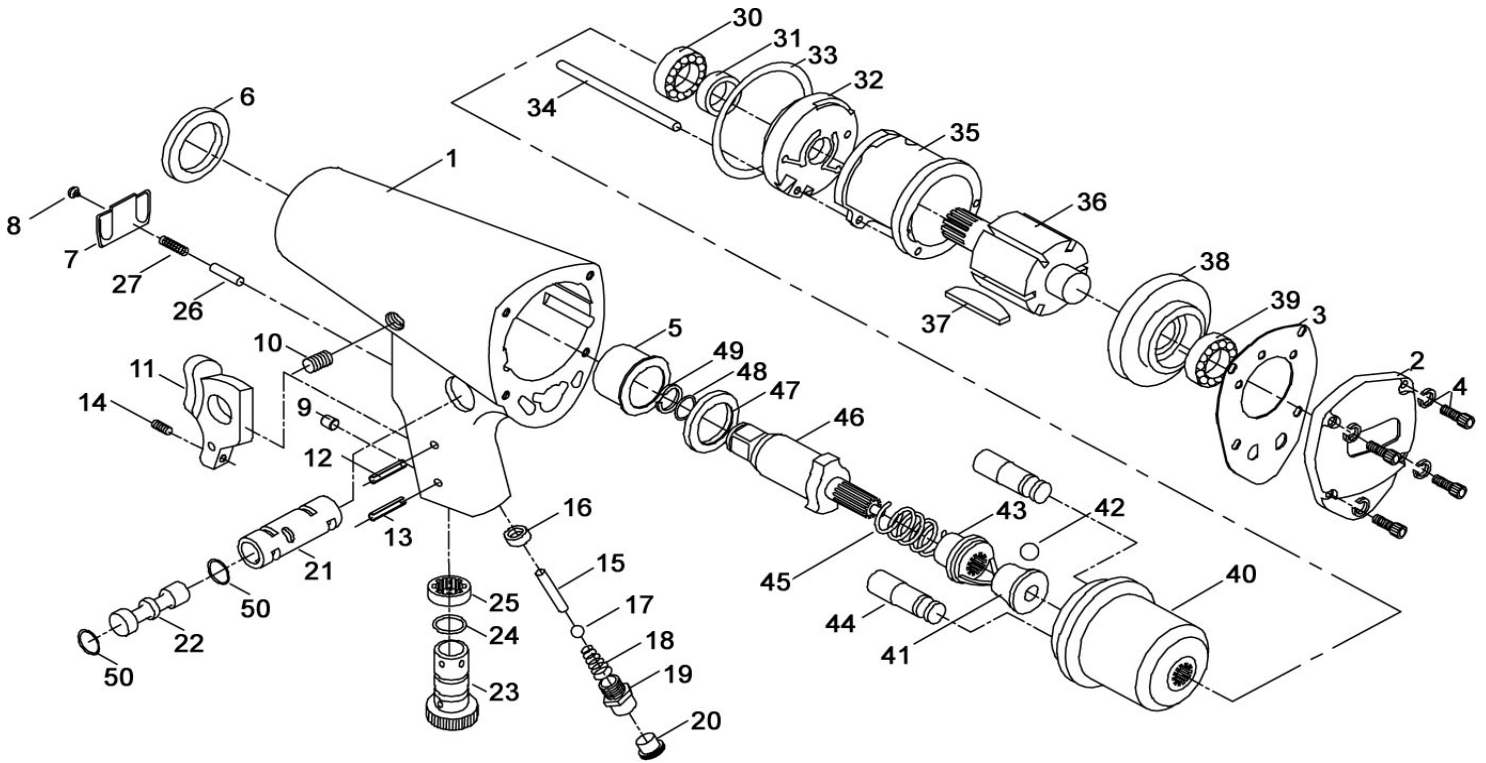

PARTS LIST

No.	Parts No.	Description	Q'ty
1	5531B-01	Motor Housing	1
2	5531B-02	Rear Cover	1
3	5531B-03	Rear Gasket	1
4	5531B-04	Screw	4
5	5531B-05	Anvil Bushing	1
6	5531B-06	Oil Seal	1
7	5531B-07	Cover	1
8	5531B-08	Screw	1
9	5531B-09	Plug	1
10	5531B-10	Screw	1
11	5531B-11	Trigger	1
12	5531B-12	Trigger Pin	1
13	5531B-13	Pin	1
14	5531B-14	Screw	1
15	5531B-15	Throttle Pin	1
16	5531B-16	Bushing	1
17	5531B-17	Steel Ball	1
18	5531B-18	Spring	1
19	5531B-19	Hose Fitting (NPT-18T)	1
19-1	5531B-19-1	Hose Fitting (PT-19T) (Opt.)	1
20	5531B-20	Dust Cover	1
21	5531B-21	Vale Sleeve	1
22	5531B-22	Reverse Valve	1
23	5531B-23	Air Regulator	1
24	5531B-24	O-Ring	1

No.	Parts No.	Description	Q'ty
25	5531B-25	Locating Ring	1
26	5531B-26	Pin	1
27	5531B-27	Spring	1
30	5531B-30	Bearing	1
31	5531B-31	Oil Seal	1
32	5531B-32	Front End Plate	1
33	5531B-33	O-Ring	1
34	5531B-34	Cylinder Pin	1
35	5531B-35	Cylinder	1
36	5531B-36	Rotor	1
37	5531B-37	Rotor Blade	6
38	5531B-38	Rear End Plate	1
39	5531B-39	Bearing	1
40	5531B-40	Hammer Cage	1
41	5531B-41	Drive Cam Bsaе	1
42	5531B-42	Ball	1
43	5531B-43	Drive Cam	1
44	5531B-44	Hammer Bar	2
45	5531B-45	Spring	1
46	5531B-46	Anvil	1
47	5531B-47	Washer	1
48	5531B-48	O-Ring	1
49	5531B-49	Anvil Cover	1
50	5531B-50	O-Ring	2